



F100 SERIES

In line high pressure filters elements according to DIN 24550

Inline filters for operating pressure up to 100 bar, flow rate up to 400 l/min.

Available with or without bypass, indicator port is a standard option to fit a visual or electrical differential indicator.


TECHNICAL INFORMATION


tested according to NFPA T3.10.5.1 , ISO3968					
A A	A B				
Max operating:	F100 XD040-063-100 F100 XD160-250-400	100 bar 80 bar			
Burst:	F100 XD040-063-100 F100 XD160-250-400	300 bar 200 bar			
G 1/2"÷1 1/2	ıı				
Head: Bowl: Seal:	aluminium alloy aluminium alloy NBR (FKM on request)				
No by-pass or 6 bar setting					
	Max operating: Burst: G 1/2"÷1 1/2 Head: Bowl: Seal:	Max operating: F100 XD040-063-100 F100 XD160-250-400 Burst: F100 XD040-063-100 F100 XD160-250-400 G 1/2"÷1 1/2" Head: aluminium alloy aluminium alloy Seal: NBR (FKM on request)			


ELEMENT	type DIN 24550, tested according to ISO 2941, 2942, 2943, 3968, 16889, 23181				
FILTER MEDIA:	Inorganic microfiber: Paper:	G03 - G06 - G10 - G15 - G25 C10			
DIFFERENTIAL COLLAPSE PRESSURE:	21 bar or 210 bar				
OPERATING TEMPERATURE RANGE:	-25°C +100°C				
FLUID COMPATIBILITY:	Full with HH-HL-HM-HV (acc. To ISO 2943). For use with other fluid please contact Filtrec Customer Service (info@filtrec.it).				




OVERALL DIMENSIONS

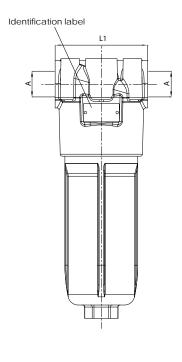

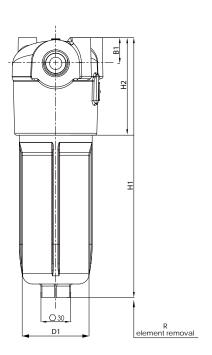

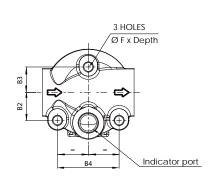

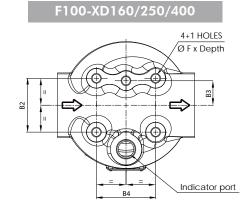

NOMINAL SIZE

MODEL	Α	В1	B2	В3	B4	D1	F	H1	H2	L1	R	WEIGHT
F100-XD040	G 1/2"							183				1,45 Kg
F100-XD063	G 3/4"	25	27,5			65		253	95	90	110	1,55 Kg
F100-XD100	G 1"			25	60,6		M10x15	332				1,8 Kg
F100-XD160	C 1 1/4"			25	00,0		MIUXIS	289				3,7 Kg
F100-XD250	G 1 1/4" G 1 1/2"	40	55			110		361	129	140	130	4,4 Kg
F100-XD400	0 1 1/2							514				5,6 Kg



ORDERING INFORMATION

1.		2.	3.	4.	5.	6.	7.	8.	9.	10.	
F10	00	XD	100	G10	Α	В	В3	D	W	E05	
SPARE ELEME	NT	XD	100	G10	Α						
1. FILTER SER	IES			F100							
2. FILTER ELE	MEN.	T SERIES		XD							
3. FILTER SIZI					100						
J. I ILI LK SIZI	<u></u>			040-063-1 160-250-4							
					100						
4. FILTER ME	DIA			000		element					
				G03			m(c) > 1.00		_		
				G06			$_{\rm n(c)} > 1.00$		_		
				G10			$u_{\rm m(c)} > 1.00$				
				G15			$u_{\rm m(c)} > 1.00$		_		
				G25			$u_{m(c)} > 1.00$	JU		01.1	
				C10	pap	per β _{10μm(c)}	> 2		only for D	p 21 bar	
5. ELEMENT	COLL	PASE		Α	21	bar			_		
				В	210) bar			recommer	nded with no by-po	ıss opt
6. SEALS				В	NB	R			_		
				V	FKA				_		
7. CONNEC	TION	S		B3	G 1	/2"					
or different thre				B4	G 3/4"				for sizes (for sizes 040-063-100	
availability with I	Filtrec	Customer S	ervice.	B5	G 1				_		
				B6	G 1	1/4"			for sixon :	160-250-400	
				В7	G 1	1/2"			— for sizes	100-230-400	
8. BYPASS VA	ALVE			0	no	by-pass			_		
				D	6 b				_		
9. INDICATO	R PO	RT OPTION	NC	S	المنابل	n metal plu	10				
7.11 (210) (10						n plastic pl	_		— when usir	ng an indicator	
							og				
10. INDICAT	OR_			000		indicator			_		
				V05		erential vis					
				E05			ectrical 5 b	oar			
				V08		erential vis			— no bypas	s version only	
				E08	diff	erential ele	ctrical 8 b	ar			
ACCESSORIE	ς.			LC24	ΙFΓ) connecto	r		_		

The accessories must be ordered separately




PRESSURE DROP (Ap) INFORMATION FOR FILTER SIZING


The total Delta P through a filter assembly is given from Housing Δp + Element Δp .

This ideally should not exceed 1,0 bar and should never exceed 1/3 of the set value of the by-pass valve. N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and density 0,875 Kg/dm³.

HOUSING PRESSURE DROP

The housing Δp is given by the curve of the considered model and port, in correspondence of the flow rate value.

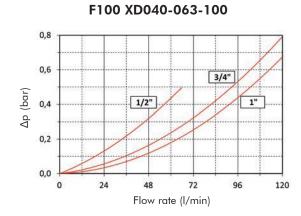

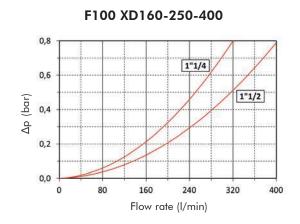

ELEMENT PRESSURE DROP (filter elements 21 bar collapse)

The element Δp (bar) is given by the flow rate (I/min) multiplied by the factor in the table here below corresponding to the selected media and divided by 1000.

If the oil has a viscosity Vx different than 32 cSt a corrective factor Vx/32 must be applied.

Example: 80 I/min with XD063G25A and oil viscosity 46 cSt $> 80 \times 4,62/1000 \times 46/32 = 0,53$ bar

	G03A	G06A	G10A	G15A	G25A	C10A
XD040	22,00	15,00	8,75	7,50	6,25	5,00
XD063	16,15	10,00	6,15	5,38	4,62	3,85
XD100	12,00	6,50	4,00	3,50	3,00	2,00
XD160	7,81	4,96	2,92	2,04	1,66	0,94
XD250	5,20	2,90	1,86	1,01	0,96	0,58
XD400	3,25	1,69	1,24	0,71	0,64	0,36

EXAMPLE OF TOTAL Ap CALCULATION

F100XD063G25ABB5DWV05 with 80 I/min and oil 46 cSt:

Housing Δp 0,3 bar + element Dp 0,53 bar (80 x 4,62/1000 x 46/32) = total assembly Δp 0,83 bar



ELEMENT PRESSURE DROP (filter elements 210 bar collapse)

The element Δp (bar) is given by the flow rate (I/min) multiplied by the factor in the table here below corresponding to the selected media and divided by 1000.

If the oil has a viscosity Vx different than 32 cSt a corrective factor Vx/32 must be applied.

Example: 80 l/min with XD100G25B and oil viscosity 46 cSt $> 80 \times 5,5/1000 \times 46/32 = 0,63$ bar

	G03B	G06B	G10B	G15B	G25B
XD040	34,97	25,00	16,25	13,75	11,25
XD063	29,23	18,46	11,54	9,62	7,69
XD100	19,00	11,50	7,50	6,50	5,50
XD160	8,13	5,00	3,75	3,13	2,50
XD250	5,40	3,40	2,80	2,40	2,00
XD400	3,38	2,16	1,75	1,44	1,13


EXAMPLE OF TOTAL Ap CALCULATION


F100XD100G25BBB5DWV08 with 80 I/min and oil 46 cSt:

Housing Δp 0,3 bar + element Dp 0,63 bar (80 x 5,5/1000 x 46/32) = total assembly Δp 0,93 bar

BYPASS VALVE PRESSURE DROP

The bypass valve Δp is given by the curve of the considered model and setting, in correspondence of the flow rate value.

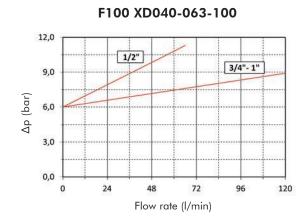

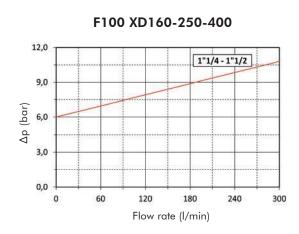

N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and density 0,875 Kg/dm³.



USER TIPS



- 1 FILTER HEAD
- 2 INDICATOR PORT
- 3 FIXING HOLES
- 4 BY- PASS VALVE
- 5 FILTER ELEMENT
- 6 FILTER BOWL
- SEAL KIT
- IDENTIFICATION LABEL

INDICATOR TIGHTENING TORQUE

V05/E05/V08/E08	50 Nm

SPARE SEAL KIT PART NUMBER

	NBR	FKM
F100 XD040-063-100	06.021.00090	06.021.00135
F100 XD160-250-400	06.021.00096	06.021.00114

WARNING



Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.

DISPOSAL OF FILTER ELEMENT



The used filter elements and the filter parts dirty of oil are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.

INSTALLATION



- 1. the IN and OUT ports must be connected to the hoses in the correct flow direction (an arrow shows on the filter head (1)
 - the filter housing should be preferably mounted with the bowl (6) downward
 - secure to the frame the filter head (1) using the threaded fixing holes (3)
 - 4. verify that no tension is present on the filter after mounting
 - 5. enough space must be available for filter element replacement
 - the visual clogging indicator must be in a easily viewable position
 - 7. when a electrical indicator is used, make sure that it is properly wired



- never run the system with no filter element fitted
- keep in stock a spare FILTREC filter element for timely replacement when required

OPERATION



- 1. the filter must work within the operating conditions of pressure, temperature and compatibility given in the first page of this data
 - the filter element must be replaced as soon as the clogging indicator signals at working temperature (in cold start conditions, oil temperature lower than 30°C, a false alarm can be given due to oil viscosity)
 - If no clogging indicator is mounted, replace the element according to the system manufacturer's recommendations

MAINTENANCE



- make sure that the system is switched off and there is no residual pressure in the filter
- unscrew the bowl (6) by turning it anti-clockwise and remove it
- remove the dirty element (5)
- 4. fit a new FILTREC element (5), verifying the part number, particularly concerning the micron rating; open its plastic protection on the open end side and insert it onto the spigot in the filter head, then remove completely the plastic protection
- 5. clean carefully the bowl; check the O-rings (7) conditions and replace if necessary
- lubricate the bowl's thread (6) and screw it by hand in the filter head (1) by turning it
- screw in the bowl to stop



↑ 8. the used filter elements cannot be cleaned and re-used